




INTERPHONE TOUR SPORT URBAN

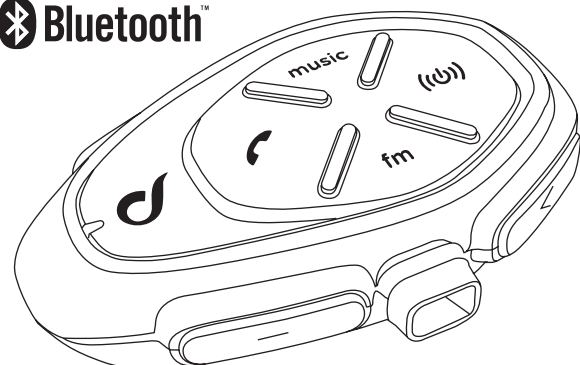

QUICK GUIDE

CHECK FOR SOFTWARE UPDATES ON WEBSITE
www.interphone.com

WARNING ON THE BATTERY OF THE PRODUCT
Fully charge the battery before using the product for the first time. Do not store the Product without charging it. Failure to do so may cause irreversible damage to the battery capacity. Charge the battery every TWO months.

WARNING ON THE WATER RESISTANCE OF THE PRODUCT
The external unit (control unit), connected to the audio kit, is classified IP67 according to the IEC60529 standard. The control unit, connected to the audio kit, can therefore be immersed in a metre of fresh water for a maximum of 30 (thirty) minutes. Despite this classification, the device is not immune to greater stress, such as prolonged immersions or high pressure water jets. Using the product during intense meteorological phenomena, at high speeds, may be equivalent to subjecting the product to a high pressure jet.



FOLLOW ALL SUGGESTIONS CAREFULLY TO AVOID DAMAGING THE DEVICE:
Do not immerse the product in fresh water which is more than a metre deep for more than 30 minutes.

Do not store the product when still wet: dry it with a clean, soft cloth. Dry any water or moisture present in the connector of the control unit and/or audio kit with hot air for at least 10 minutes, so as to prevent the oxidation of the contacts.



Do not expose the product to salt water or ionised water, drinks or other liquids. If the device is exposed to liquids other than fresh water, wash the device with cold fresh water and dry it carefully with a clean, soft cloth.

Do not expose the product to high pressure water jets. Make sure that the audio kit connector is completely inserted in the control unit. If not, complete protection against water and dust is not guaranteed.

CHAPTER 1 – COMPOSITION OF THE KIT

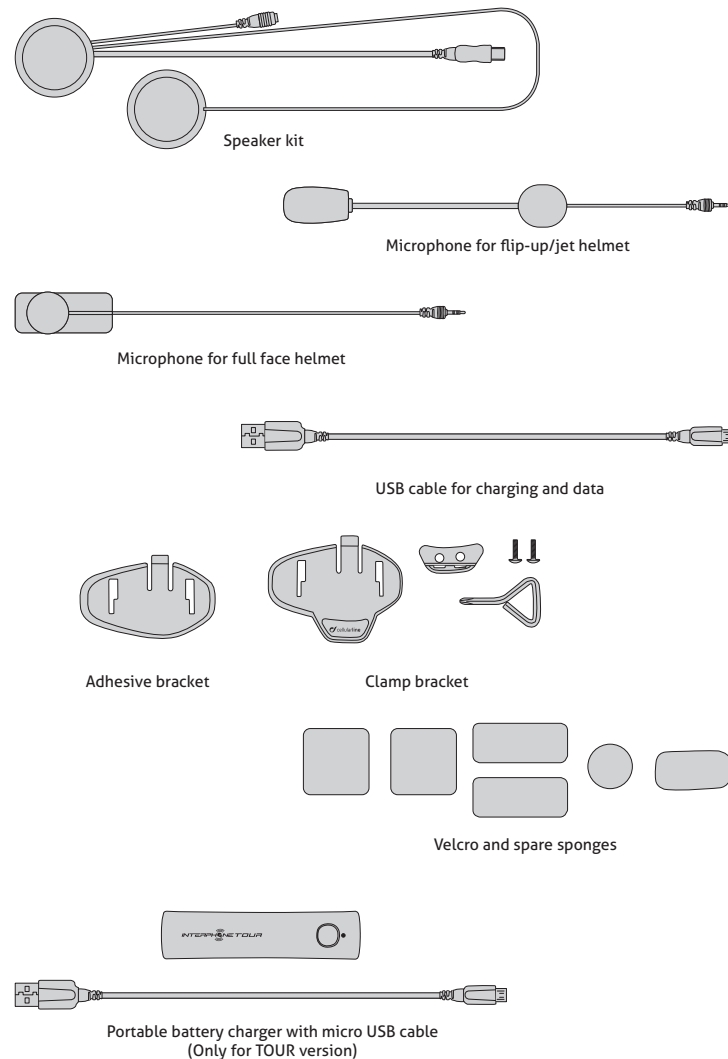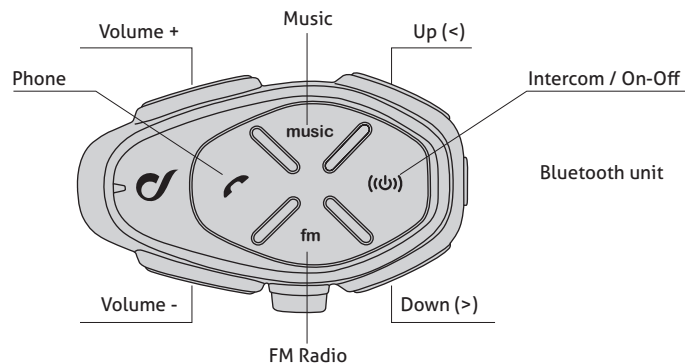


CHAPTER 2 – INSTALLATION INSTRUCTIONS

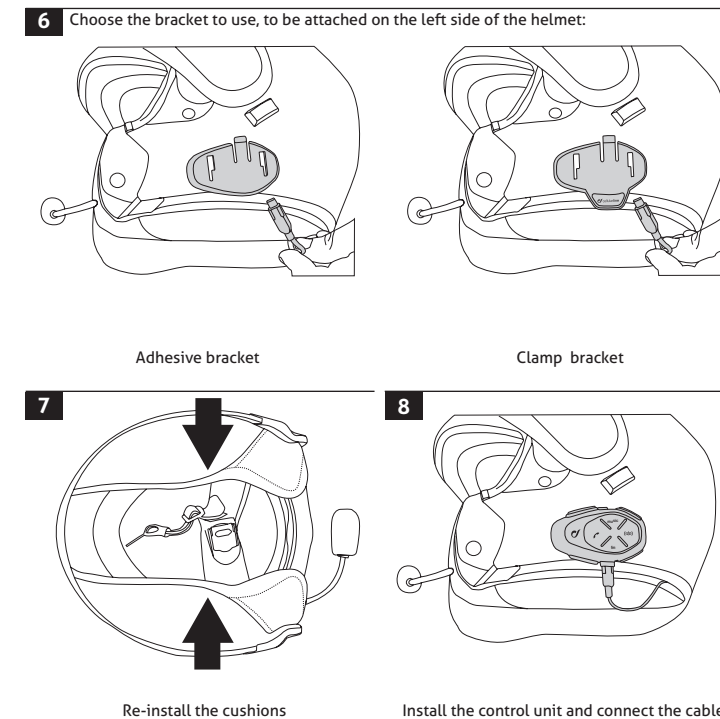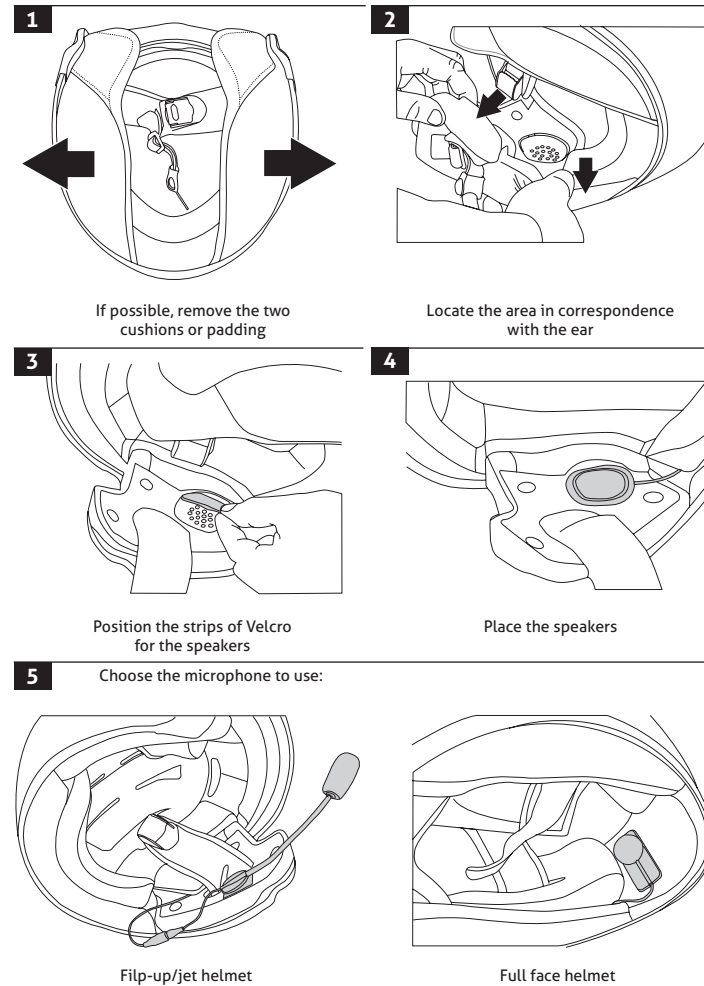

(!) Warnings on installation:


1. The centre of the speakers must be placed in correspondence with the ears, as close as possible.
2. The marking "MIC" on the microphone must be directed towards the mouth.

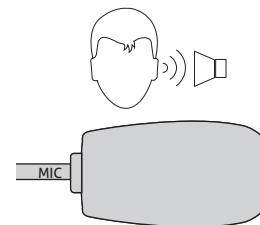

CHAPTER 3 - BATTERY CHARGE

Insert the micro USB charging cable in the special intercom connector, as shown in the picture. Connect the cable to a standard USB charger.

LED indications:
 - red LED: charging.
 - green LED: fully charged.

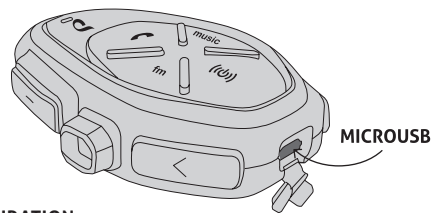

CHAPTER 4 - BASIC CONFIGURATION

Turn the device on

Press **(on)** until the blue LED comes on.

Turn the device off

Press **(off)** until the red LED lights up and the device turns off.

Change the voice guide language

1. With the unit on, press and hold **<** until the third beep. The LED will be purple.
2. Press **+** to select the desired language.
3. Press and hold **<** until the third beep to save the selection. The LED will flash blue.

CHAPTER 5 - TELEPHONE / GPS

Pairing

1. With the unit off, press and hold **(on)** until the LED flashes red/blue alternately.
2. Start searching for new devices on the mobile phone / GPS
3. Select the intercom on the phone / GPS ("interphone tour", "interphone sport" or "interphone urban").
4. Once the pairing has been confirmed, the LED will flash BLUE twice, every three seconds.

Answering a call

Short press **(call)**

Voice dial

Short press **(voice)**

Redial last number

Press **(redial)** until it beeps (1.5sec)

CHAPTER 6 – MUSIC

Enable/disable playback from the phone

Short press **(music)**

Next track/Previous track

Short press **< / >**


Share the music with another intercom

Press for 3 seconds **<** or **>**


CHAPTER 7 – INTERCOM

Automatic pairing (only Interphone tour)

1. Arrange the units (off and maximum 4) next to one another as shown in the picture.

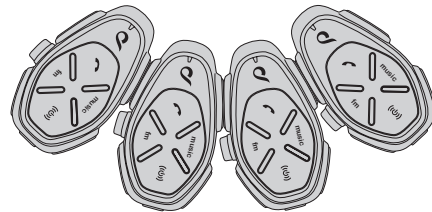

2. On the first unit, press **(on)** until the LED flashes red/blue. The procedure will end automatically, by pairing all the units.

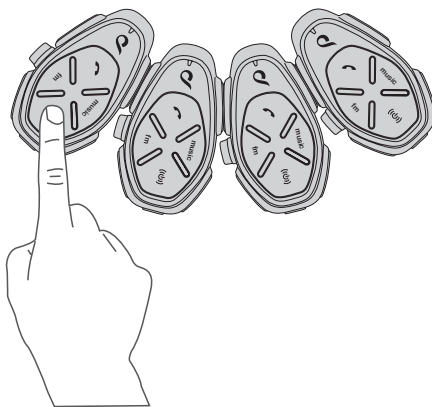


Manual pairing

1. With the intercom off, on each unit, press and hold **(on)** until the LED flashes red/blue.
2. Then press **(on)** only on one of the two units.


Conference between 2 users

Press **(on)** on unit 1 or on unit 2.




Conference between 3 users

1. For the first time only, pair unit 1 to 2 and then unit 2 to 3.
2. Press **(on)** on unit 2 to start the conference between units 1, 2, 3.



Conference between 4 users

1. For the first time only, pair unit 1 to 2, then unit 2 to 3 and finally unit 3 to 4.
2. Press **(on)** on unit 2 to start the conference between units 1, 2, 3.
3. Press **(on)** on unit 4 to start the conference between units 1, 2, 3 with unit 4.



CHAPTER 8 – FM RADIO

Enable/disable the FM radio

Short press **(fm)**

Scan frequency

Short press **< / >**

Save frequency

Press **(fm)** until it beeps (1.5sec)

Temporary storage of the 8 strongest stations

Press **(fm)** until the second beep (3 sec)

Go to www.interphone.com for the complete user manuals.

TECHNICAL CHARACTERISTICS

Bluetooth® compliance:	Bluetooth® v. 4.2 - Class II
Supported Bluetooth profiles:	HFP A2DP AVRCP
Dimensions mm:	55x85x25
Weight:	68 g
Capacity:	Up to 10 metres
Talk time:	20-12 h
Stand-by time:	1000 h
Charging time:	1,5 -2 h
Battery type:	Lithium-ion rechargeable



EN - This product is CE marked in accordance with the provisions of Directive R&TTE (1999/05/EC) and of Directive ROHS (2011/65/EU). With this, Cellular Italia S.p.A. declares that this product complies with the essential requirements and other relevant provisions of Directive 1999/5/EC and Directive 2011/65/EU. The user is prohibited from making any type of change or variation to the device. Variations or changes not expressly approved by Cellular Italia S.p.A will cancel the user's authorisation to use the device. Bluetooth® is a trademark owned by Bluetooth SIG, Inc. For further information, visit the website www.interphone.cellularline.com



EN - INSTRUCTIONS FOR THE DISPOSAL OF APPLIANCES FOR DOMESTIC USERS (Applicable in countries in the European Union and those with separate waste collection systems) This mark on the product or documentation indicates that this product must not be disposed of with other household waste at the end of its life. To avoid any damage to health or the environment due to improper disposal of waste, the user must separate this product from other types of waste and recycle it in a responsible manner to promote the sustainable re-use of the material resources. Domestic users should contact the dealer where they purchased the product or the local government office for all the information regarding separate waste collection and recycling for this type of product. Corporate users should contact the supplier and verify the terms and conditions in the purchase contract. This product must not be mixed with other commercial waste. This product has a battery that cannot be replaced by the user. Do not attempt to open the device to remove the battery as this could cause malfunctions and seriously damage the product. When disposing of the product, please contact the local waste disposal authority to remove the battery. The battery inside the device was designed to be able to be used during the entire life cycle of the product

